



Setup

1 Description of XaviXBassFISHING Reel and Rod.


Package contents of XaviXBassFISHING

System Cartridge (1)	XaviX Fishing Rod (1)	XaviX Fishing Reel (1)
User's Guide (1)	Quick Set-up Guide (1)	Registration Card (1)
Serial No. Label (4)	AA Battery (4)	

XaviX Fishing Reel

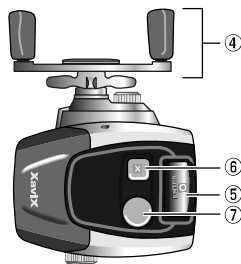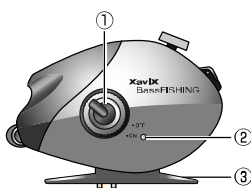


XaviX Fishing Rod

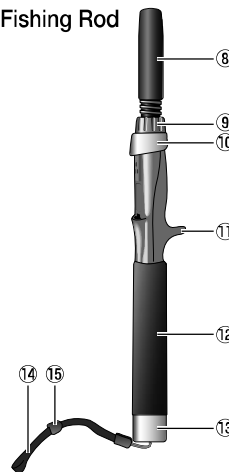

- ① POWER Switch
- ② Power Indicator
- ③ Reel foot
- ④ Handle
- ⑤ ENTER Key
- ⑥ CANCEL Key
- ⑦ SELECT Key
- ⑧ Front Grip
- ⑨ Nut
- ⑩ Hood
- ⑪ Trigger
- ⑫ Grip
- ⑬ Battery cap
- ⑭ Wrist Strap
- ⑮ Adjuster


2 Setup XaviXPORT.

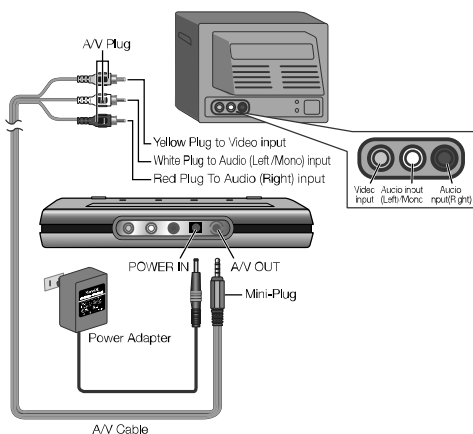

Please be sure that the A/V mini-plug is firmly inserted into the back of the XaviXPORT.


*XaviXPORT typically sold separately unless clearly indicated on the package that the PORT is included.

3 Insert System Cartridge.

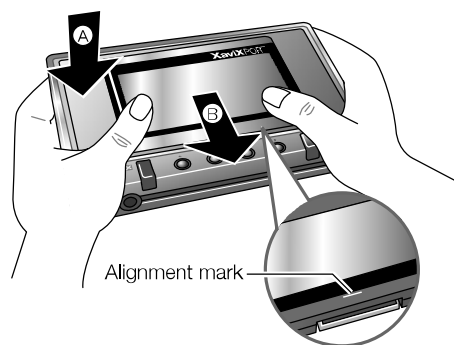


INSERT the cartridge into the PORT and slide the cartridge towards the front of the PORT. Press the PORT power switch and check to be sure the green power light is on.


4 Assembling the XaviX Fishing Tackle (Rod and Reel).

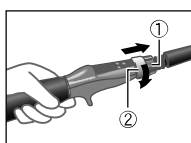


1. Hold the Fishing Rod firmly as shown in the figure. Loosen the Nut ① and Hood ② on the Fishing Rod in the direction of the arrow all the way back.

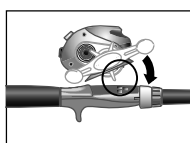

3. Bring the front Reel foot of the Fishing Reel towards the Fishing Rod so that it is flush against the Fishing Rod.

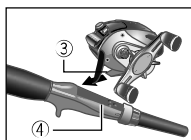

2. Insert the back Reel foot ③ of the Fishing Reel into the insert slot ④ on the Fishing Rod towards you.

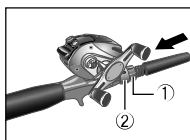

4. Tighten the Nut ① and Hood ② firmly.



Do not soil or touch the contacts on the XaviX Rod and Reel. Doing so might cause the XaviX Fishing Tackle to malfunction.

Note


Do not use unnecessary force to tighten the Nut ① and Hood ②. Doing so might cause the Nut ① and Hood ② to split or break.

5 Install the batteries in your XaviX Fishing Rod.

1. Unscrew the Battery cap.




3. Screw in the Battery cap.

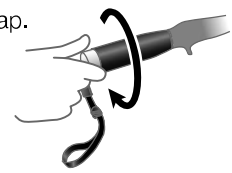

2. Gently draw out the Battery Box.

Slide in the batteries making sure that the + and - ends are facing the correct direction.

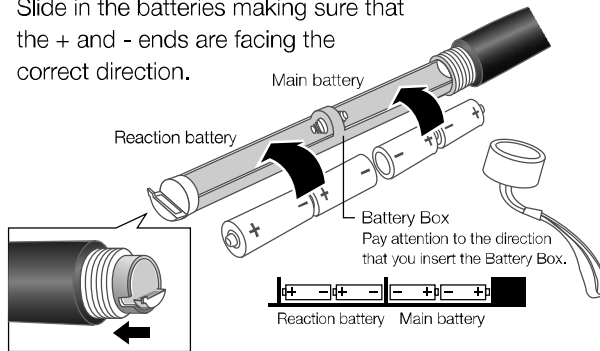

When you replace the batteries, first make sure that the Battery Box has been inserted correctly.

To do this, make sure that the small protrusion on the end of the Battery Box is fitted into the indent on the screw section of the Rod grip and is facing left. This protrusion is for ensuring that the Battery Box does not turn inside the grip during use and that the batteries do not drop out when the Battery Box is removed.


If the Power Indicator does not light even with the power turned on:
Replace the two batteries in the Main Battery compartment of the Battery Box with fresh batteries.

If the pull of the fish you have caught is not reaching the XaviX Fishing Reel even though the Power Indicator is lit:
Replace the two batteries in the Reaction Battery compartment of the Battery Box with fresh batteries.

How to Fish


1 Distance and Angle.

Side view

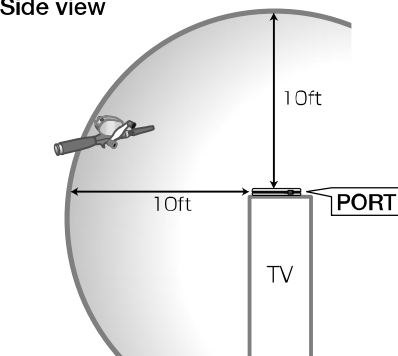


We recommend the above interactive distance and angle.

Top view

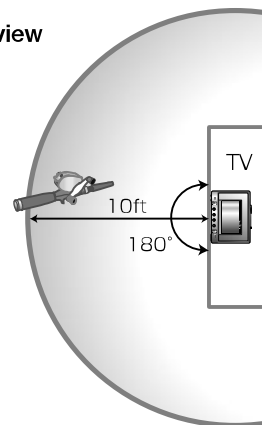

Insert your hand into the wrist strap. Slide the adjuster towards your hand to tighten. Slide the adjuster away from your hand to loosen.

2 How to hold the grip of the XaviX Fishing Tackle.

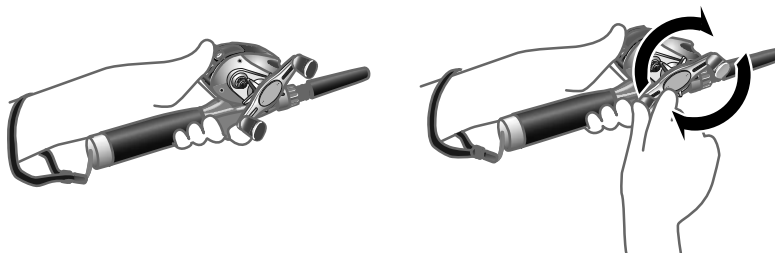

Hold the XaviX Fishing Tackle with your left hand, and turn the handle with your right hand.
Use Reel and Rod action carefully to land a record-size bass!

3 Enjoy "XaviX BassFISHING".

For further details, refer to the "XaviXPORT User's Guide" "XaviXBassFISHING User's Guide".